

excel

without compromise.


www.excel-networking.com

Instruction Sheet



Step 1 :

Put cable through the Nut.
(OD:6~8mm;23~26AWG)

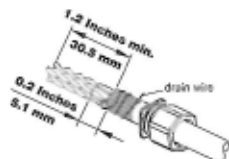

Step 2 :

- Strip off cable jacket for at least 1.2 Inches and retain a 0.2 Inches foil from cable end.
- Back cover the braid then wrap the drain wire on it.




Step 3 :

Put wires through wiring management in accordance with wiring color code.




Step 4 :

Press wiring management to terminate wires.

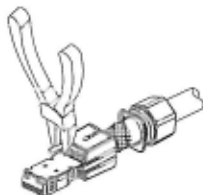


Step 5 :

Trim excess wires.

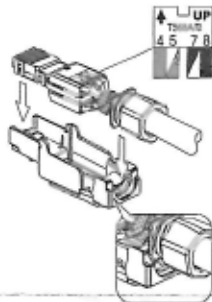


Step 6 :

Assemble the wiring management ("UP" on the top surface) into the groove of base housing, and locate the nut in the indicated slot.

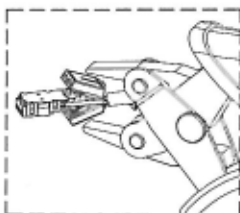

Or either by tool.

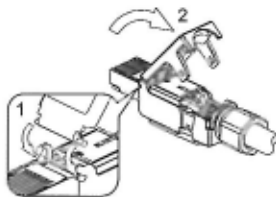

Step 7 :

- Put cover into revolving groove.
- Then press the cover to engage with base housing.



Step 8 :


Lock and tight the nut.

Disassembly Instruction:



Step 1 :

Unlock the nut.

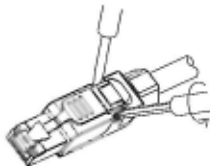

Step 2 :

Insert the slotted screwdriver into the slot and rotate to open the jaws.



Step 3 :

Insert the slotted screwdriver into the slot and rotate to open the wiring Management.