


## **Installation Manual**

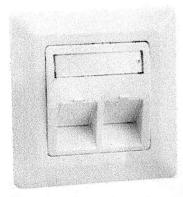


Netwrok face plate or DIN 49440 socket plate, 80\*80mm or 86\*86mm

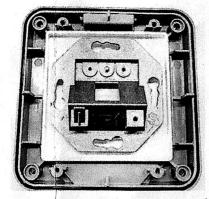


Put the face plate on the IP66 waterproof box

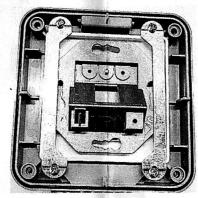


Fix the iron sheet with screws to fix the Faceplate

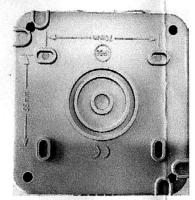


Drill holes according to the size of the bottom of the bottom box

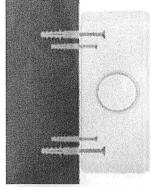


Fix the bottom box to the wall with expansion screws

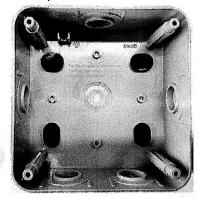


Plug the waterproof rubber plug on the screw installation position

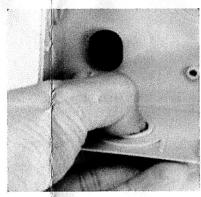


Press to remove the inlet cap (the cap can be reused)

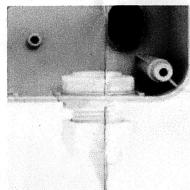


Fix the M13.5 cable interface on the bottom box

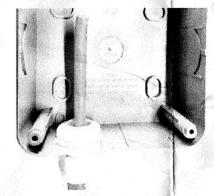


Pass the cable through the M13.5 cable connector into the back box

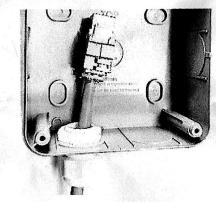


Install the RJ45 module

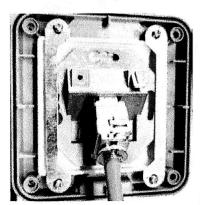


Install the RJ45 module on the faceplate

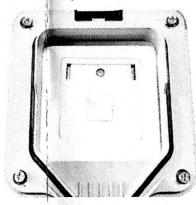


Fix the waterproof box cover and bottom box with screws

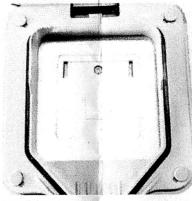

Install the stopper

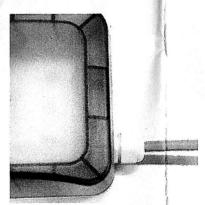

Tighten the nut of the PG13.5 cable interface

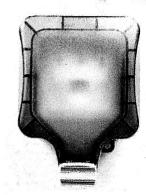

Finish installation